



L-BUS

ab Z21 FW V1.20
LocoNet T (Master) 12VDC, 500mA

LocoNet Anlagen Module ←



Funky
ab Z21 FW V1.24



UR90, 92



DT402



DT300



UT4
ab Z21 FW V1.22



Profi-BOSS
im LocoNet Slave Mode



DAISY



IRIS +
63830 IR-Receiver



Profi-Control*



TWIN-CENTER, Intellibox,
TWIN-CONTROL, IB-Control
in LocoNet Slave Mode



IB-Switch



FRED*



FREMO FRED*

TWIN-CENTER: Slave Modus ab FW V2.000 über Sonderoption 844=1
Intellibox: Slave Modus ab FW V2.001 über Sonderoption 844=2 (d.h. LocoNet Stromquelle aus)

LocoNet Slave Mode wird am **PROFI-BOSS** wie folgt aktiviert:
1. C + alt
2. MASTER auf SLAVE ändern
3. bestätigen

* Lokübernahme mittels Dispatch Verfahren über Z21_Maintenance.exe und App